



Safe Clearance Heights
for SpanSet SP150
Lanyards

Height Safety
Lifting
Load Control
Safety Management

Safe Clearance Heights for SpanSet SP150 Lanyards

Safe Clearance Heights for SpanSet SP150


When using Fall Arrest Techniques and Equipment it is important that the user is aware of the safe clearance distance required below their feet. The clearance distance includes;

- The distance required for the equipment to safely arrest a falling user.
- An additional metre to provide a gap between the arrested user and the hazard below.

Using the tables in this document you can identify the anchor position and work out the safe clearance distance required.

Safe Clearance Heights for SpanSet SP150 - Worker Weight 50kg, 100kg, 150kg

1. Identify your anchor point
2. Read off the 'Safe clearance required below foot level'.

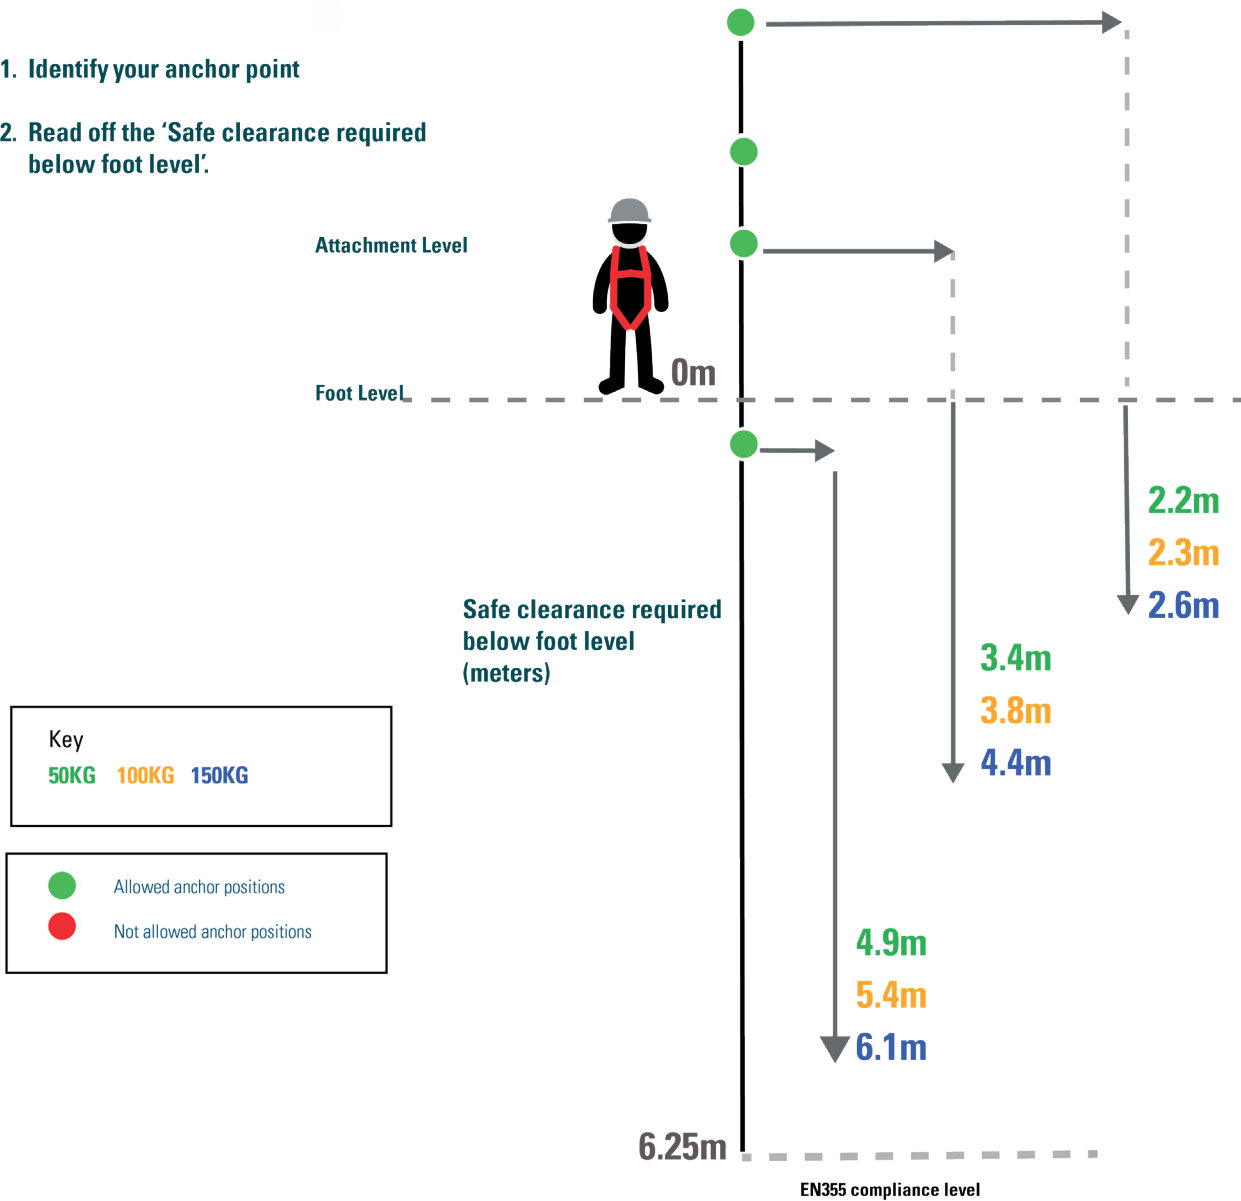

SpanSet Ltd
Telford Way, Middlewich
CW10 OHX United Kingdom
Tel: 01606 737494
email: customerservices@spanet.co.uk
www.spanset.co.uk